


2.0 AESTHETIC REAR PANEL FOR FLOOR MOUNTING


GB0740II

KIT CONTENT

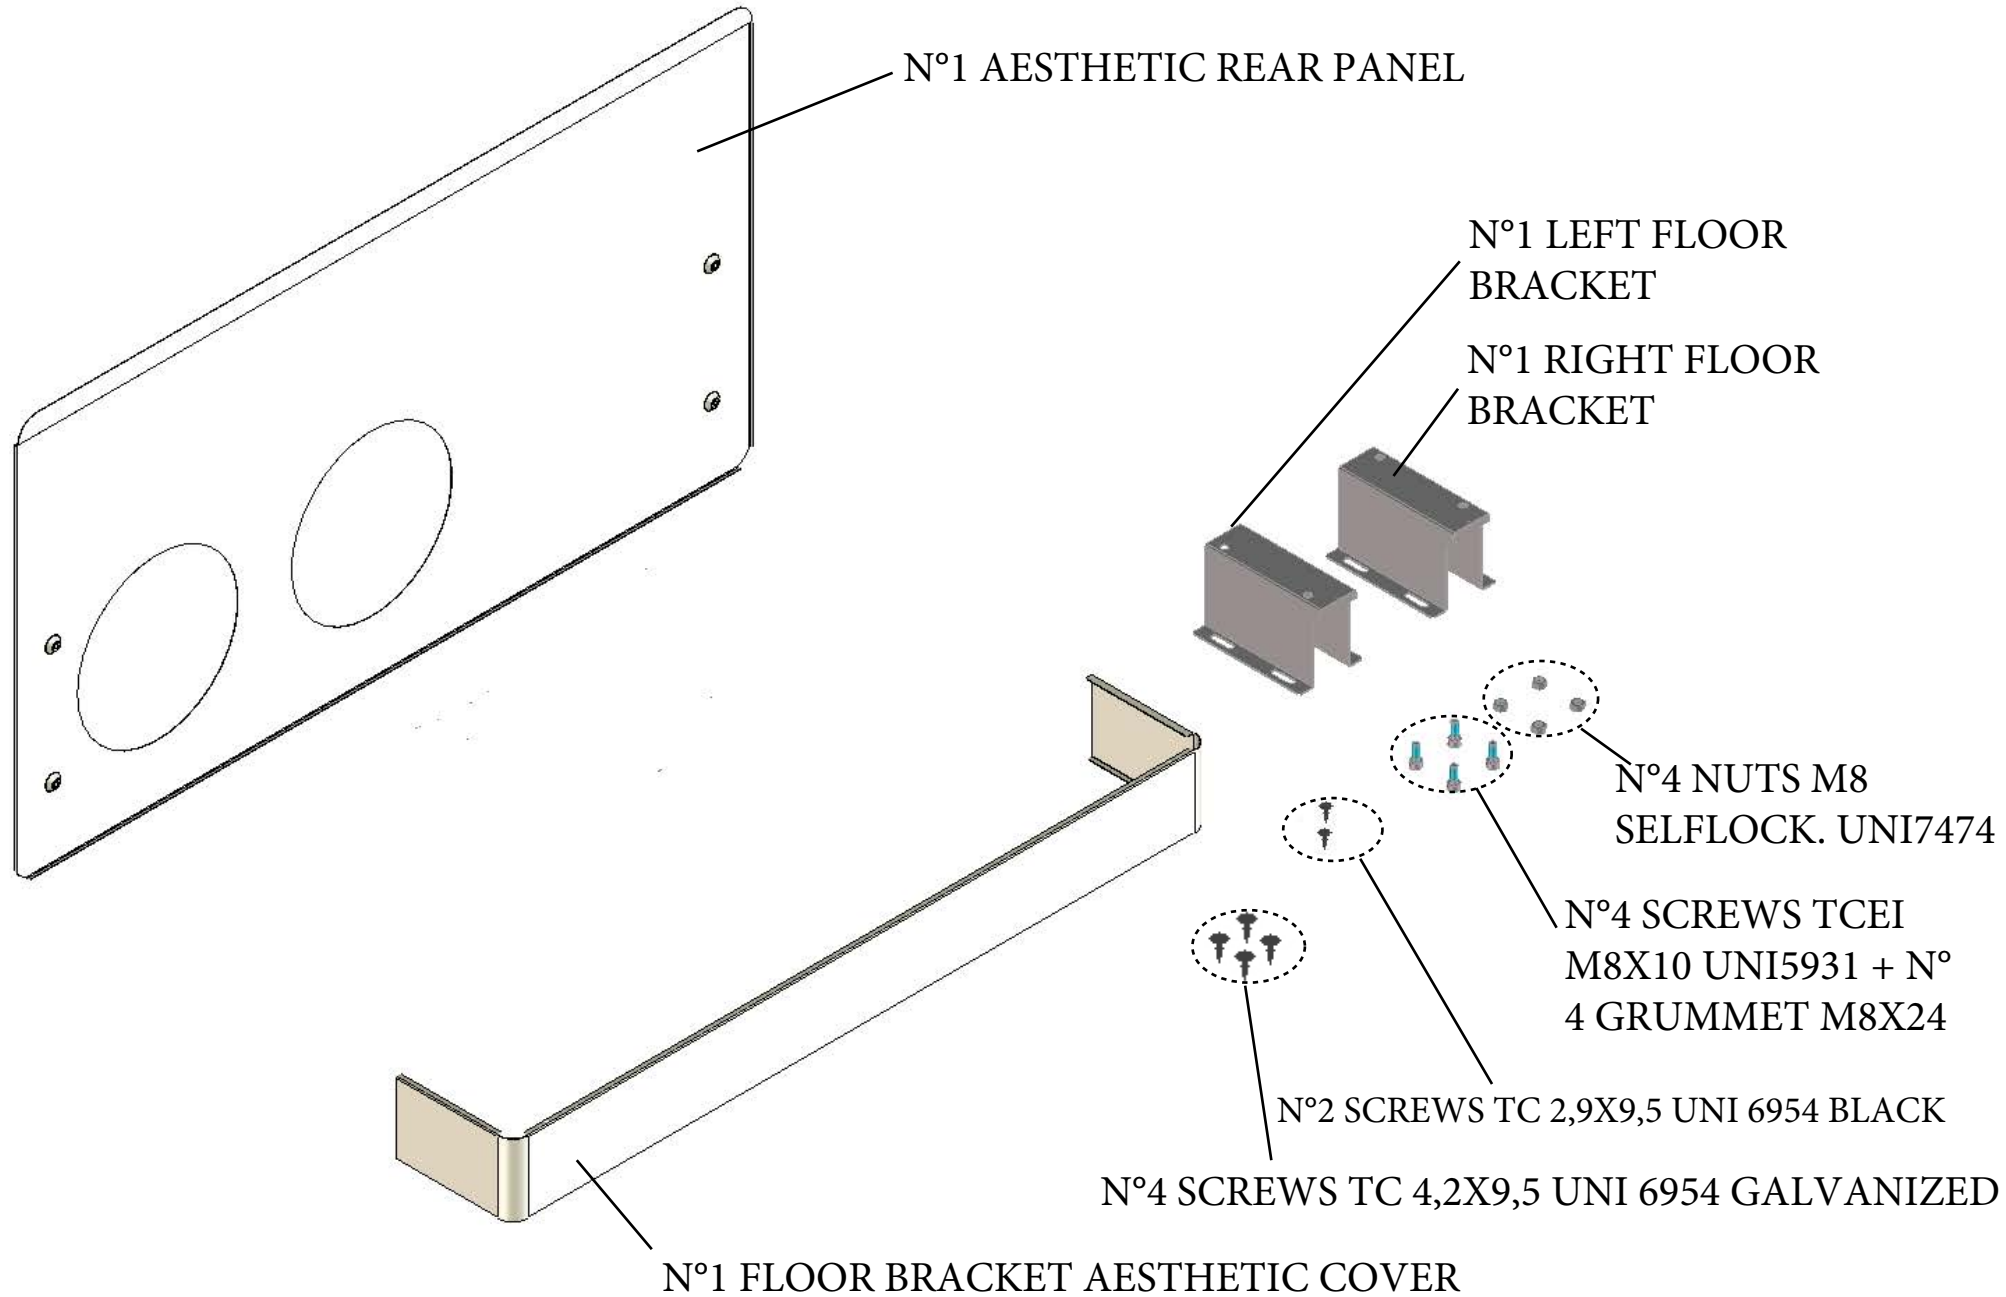


1

Remove the upper grill

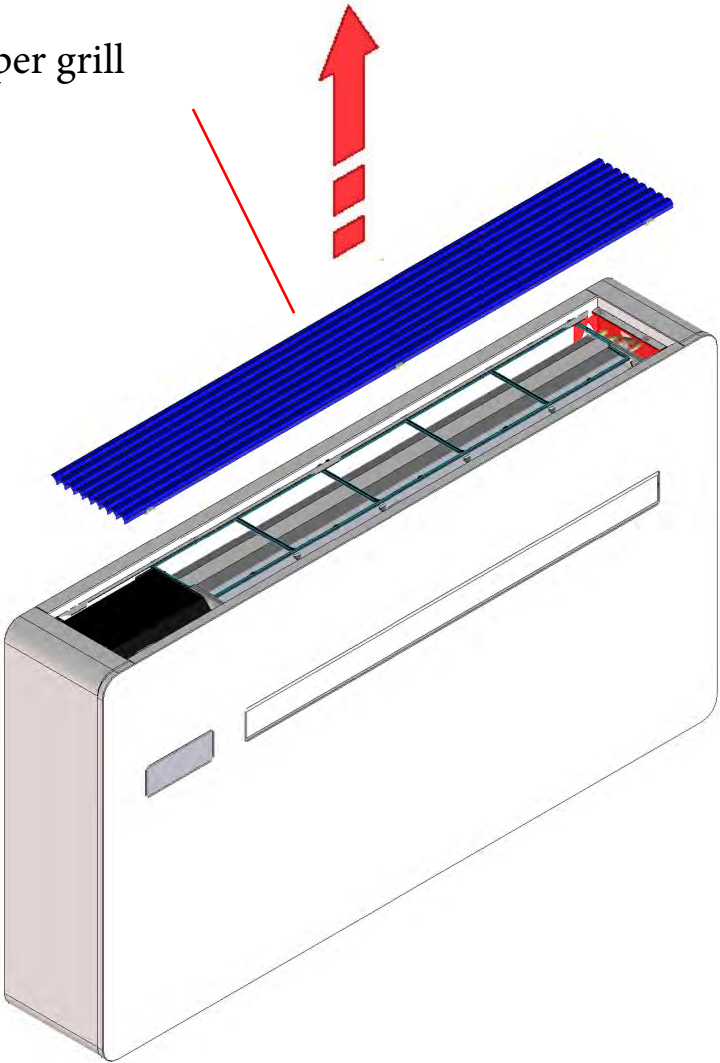


2

Remove the aesthetic
front panel unscrewing
the 2 screws 4.2x9.5

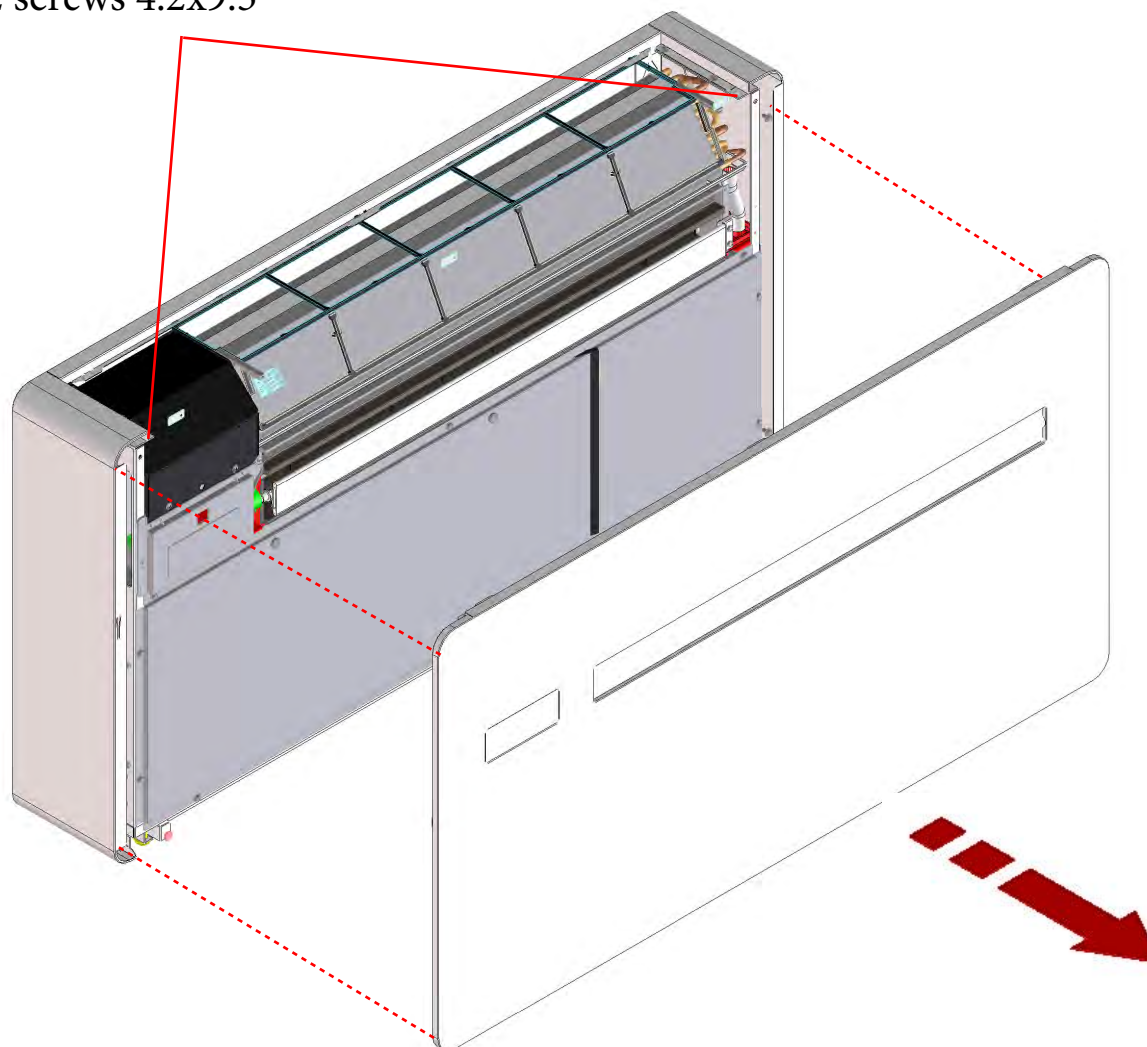


3

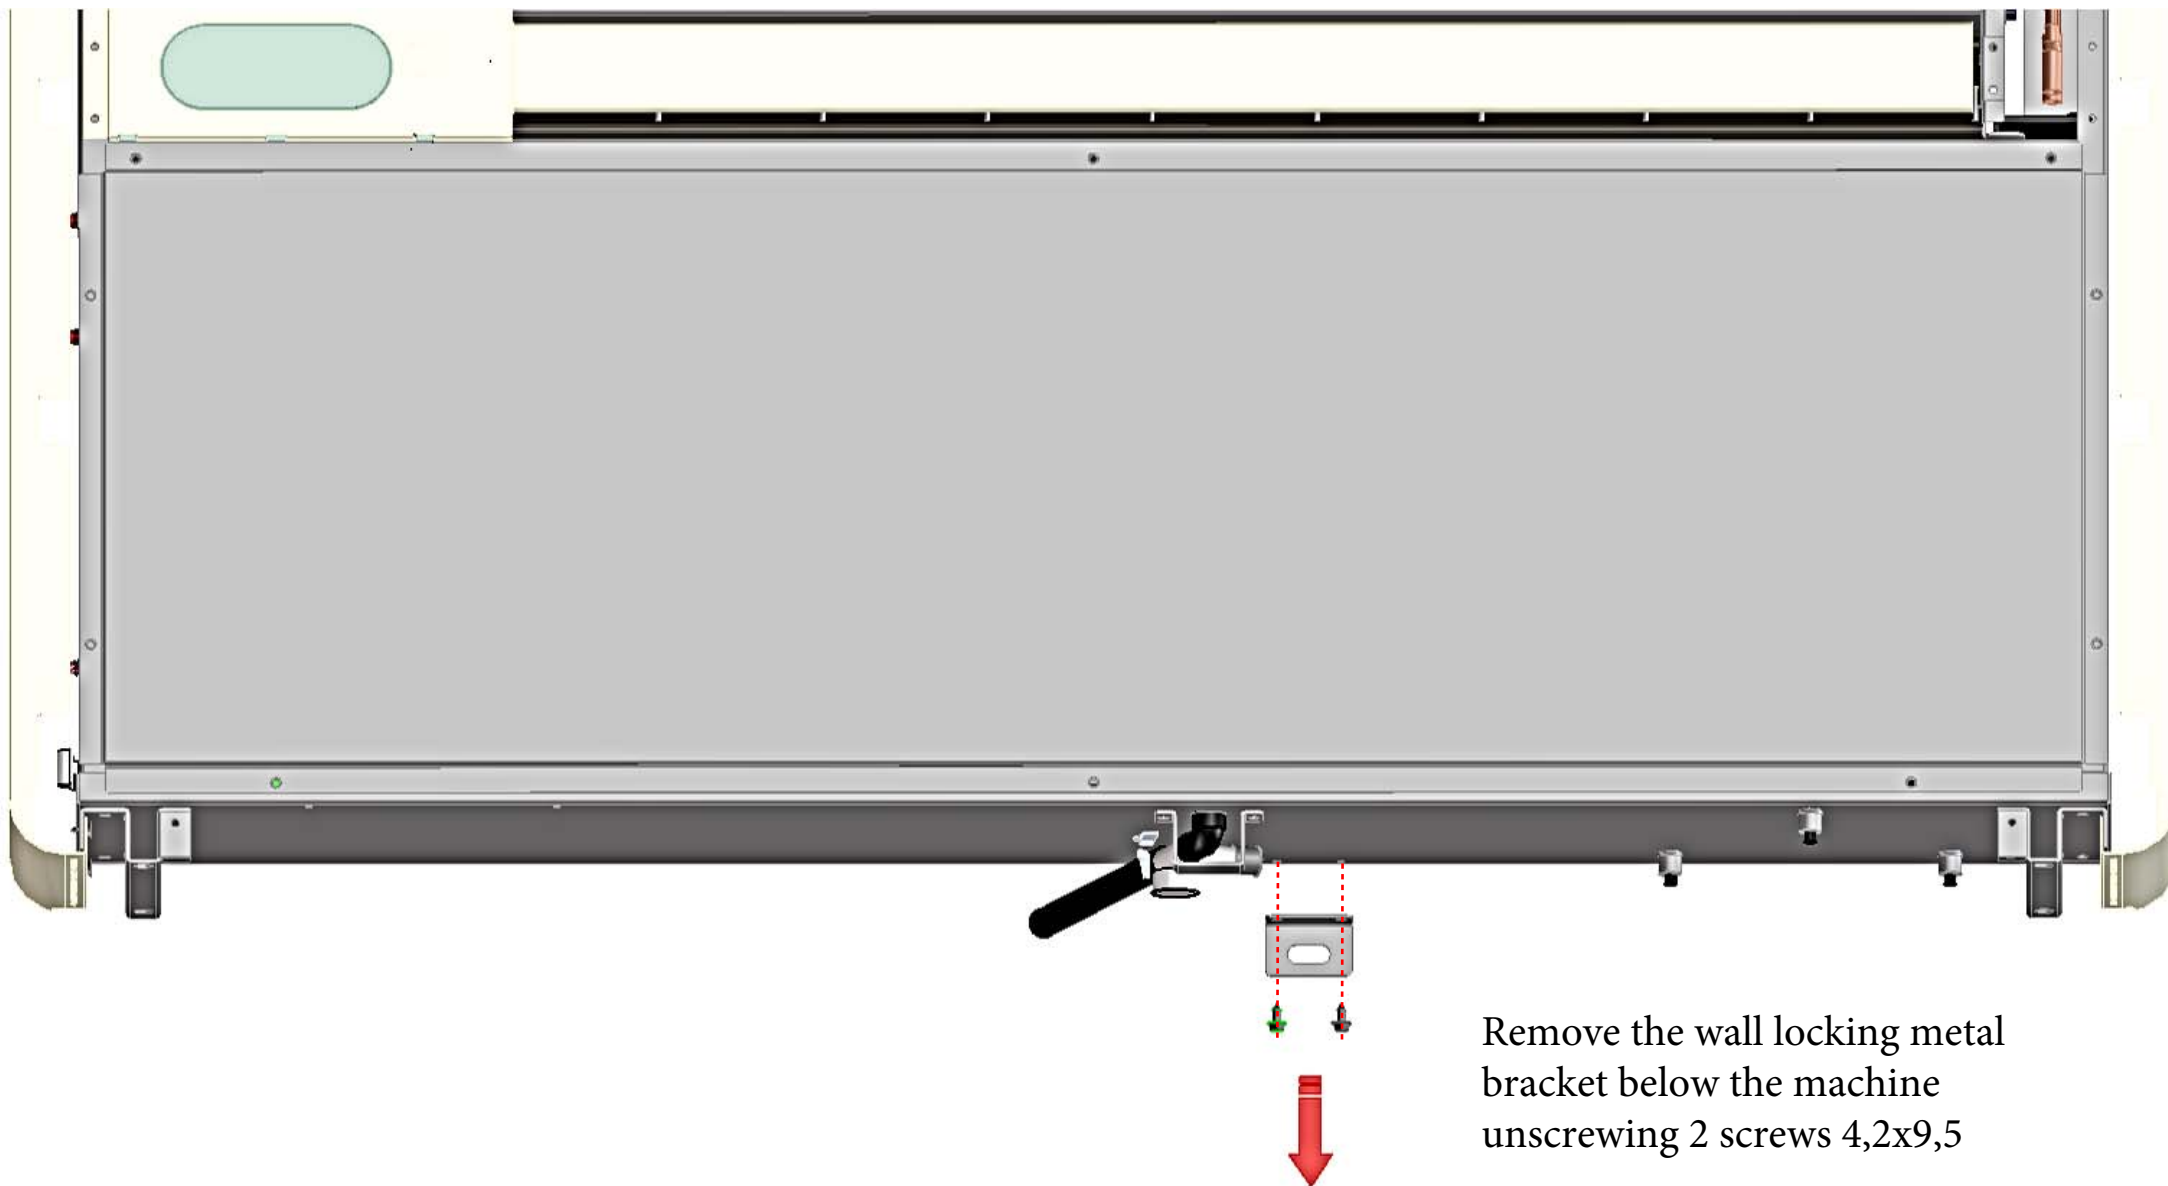


4

Insert the M8 self-locking nuts into the appropriate slots below the machine

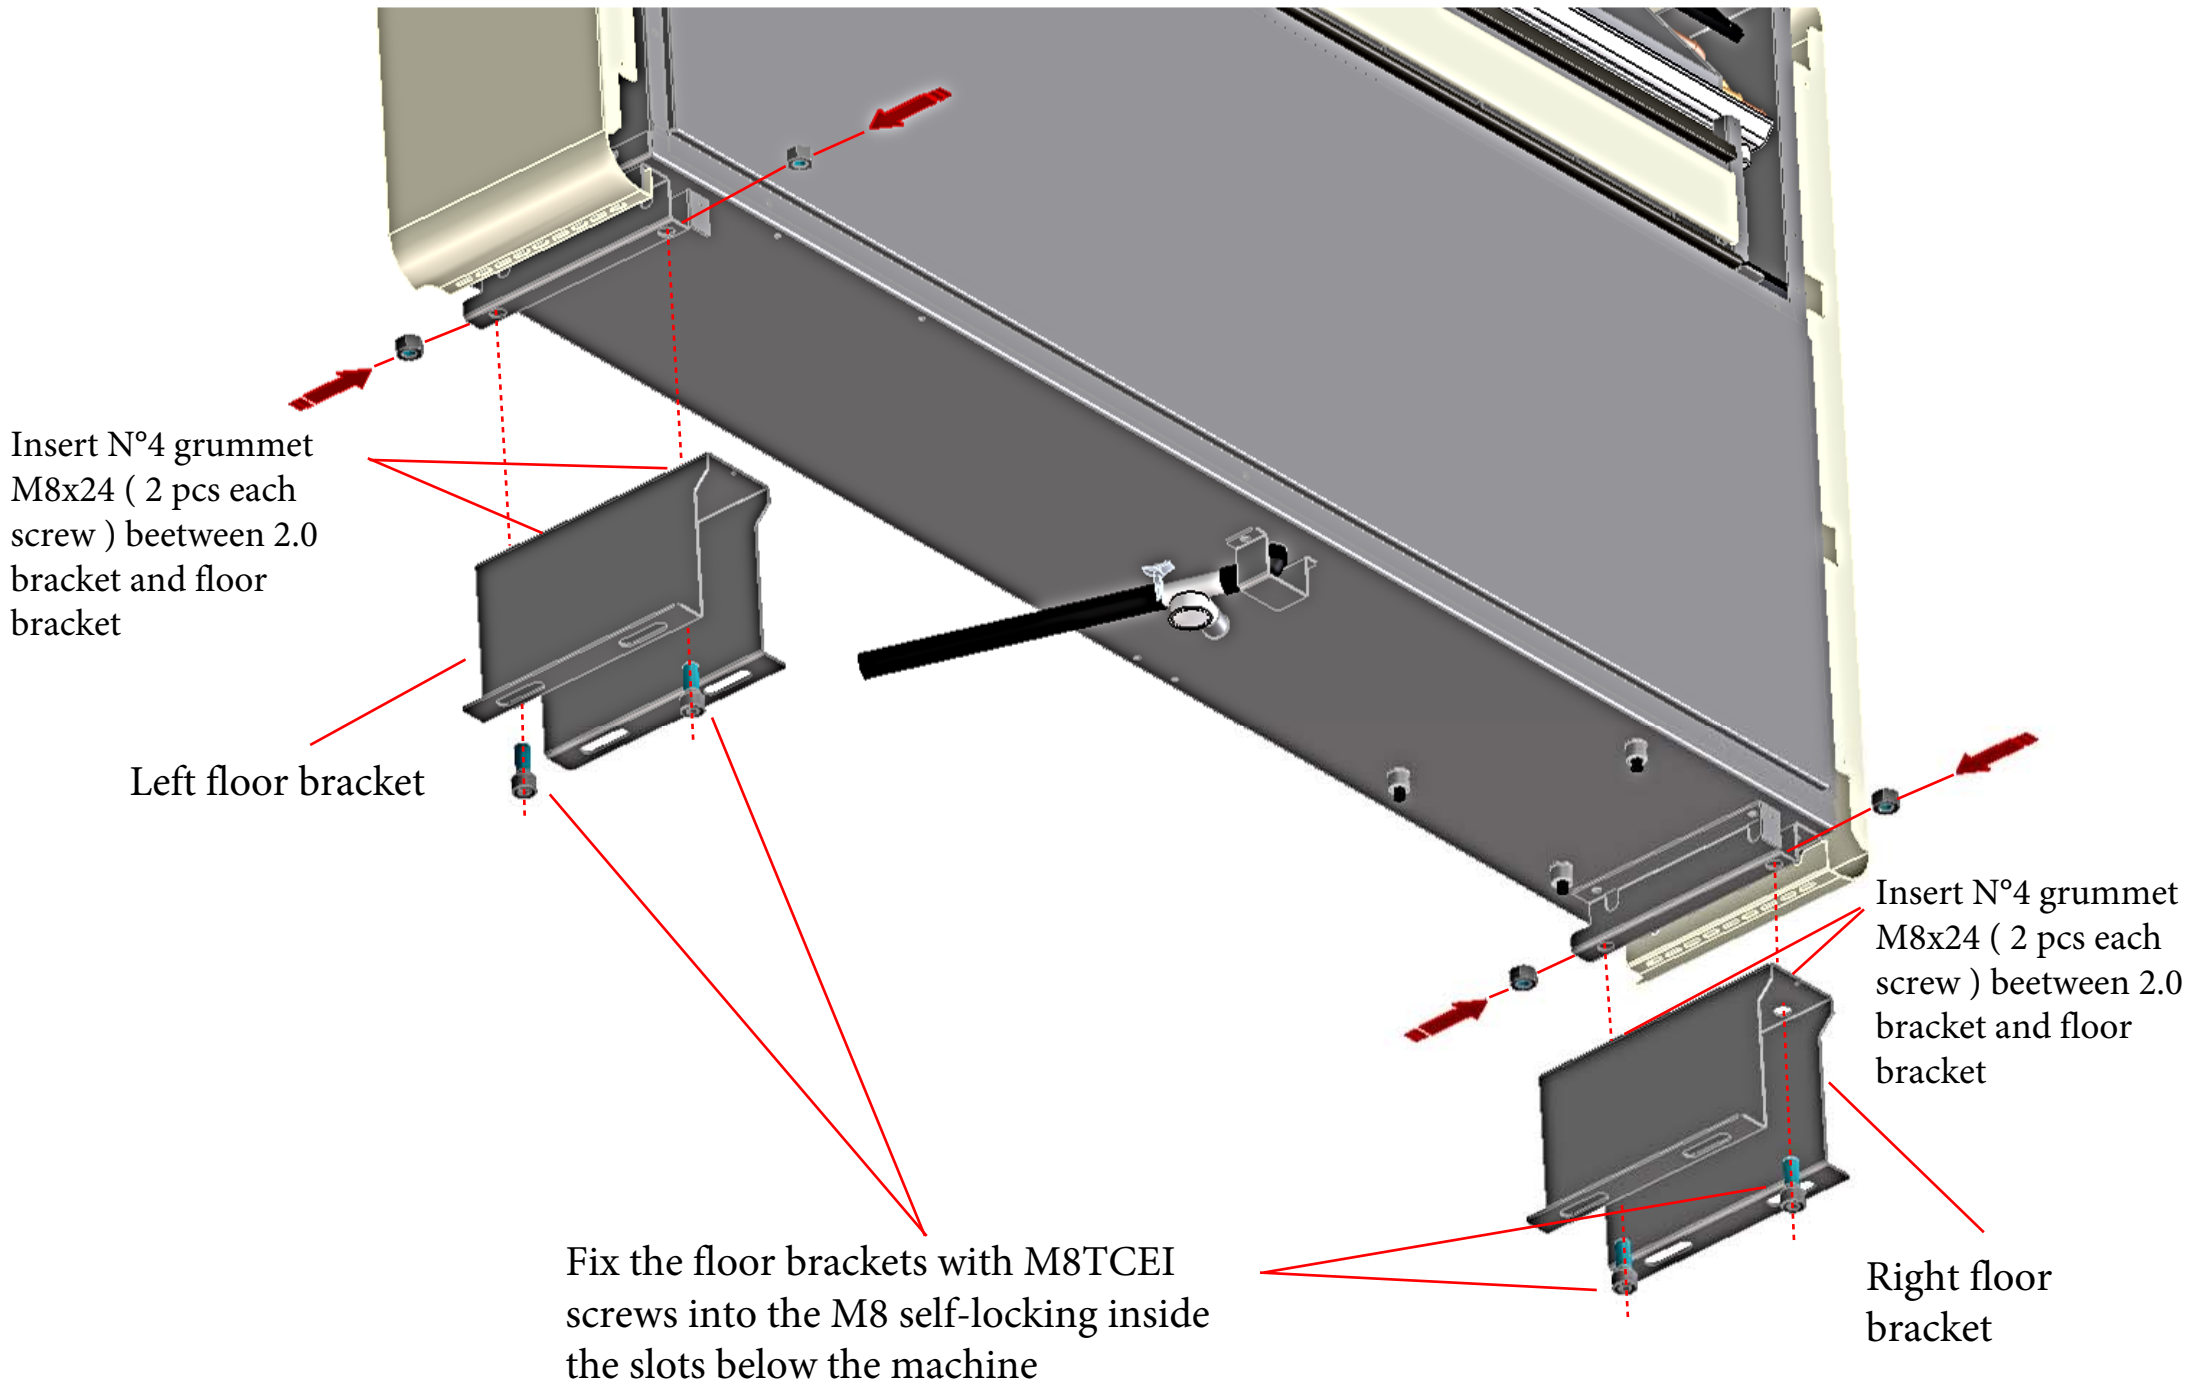

5

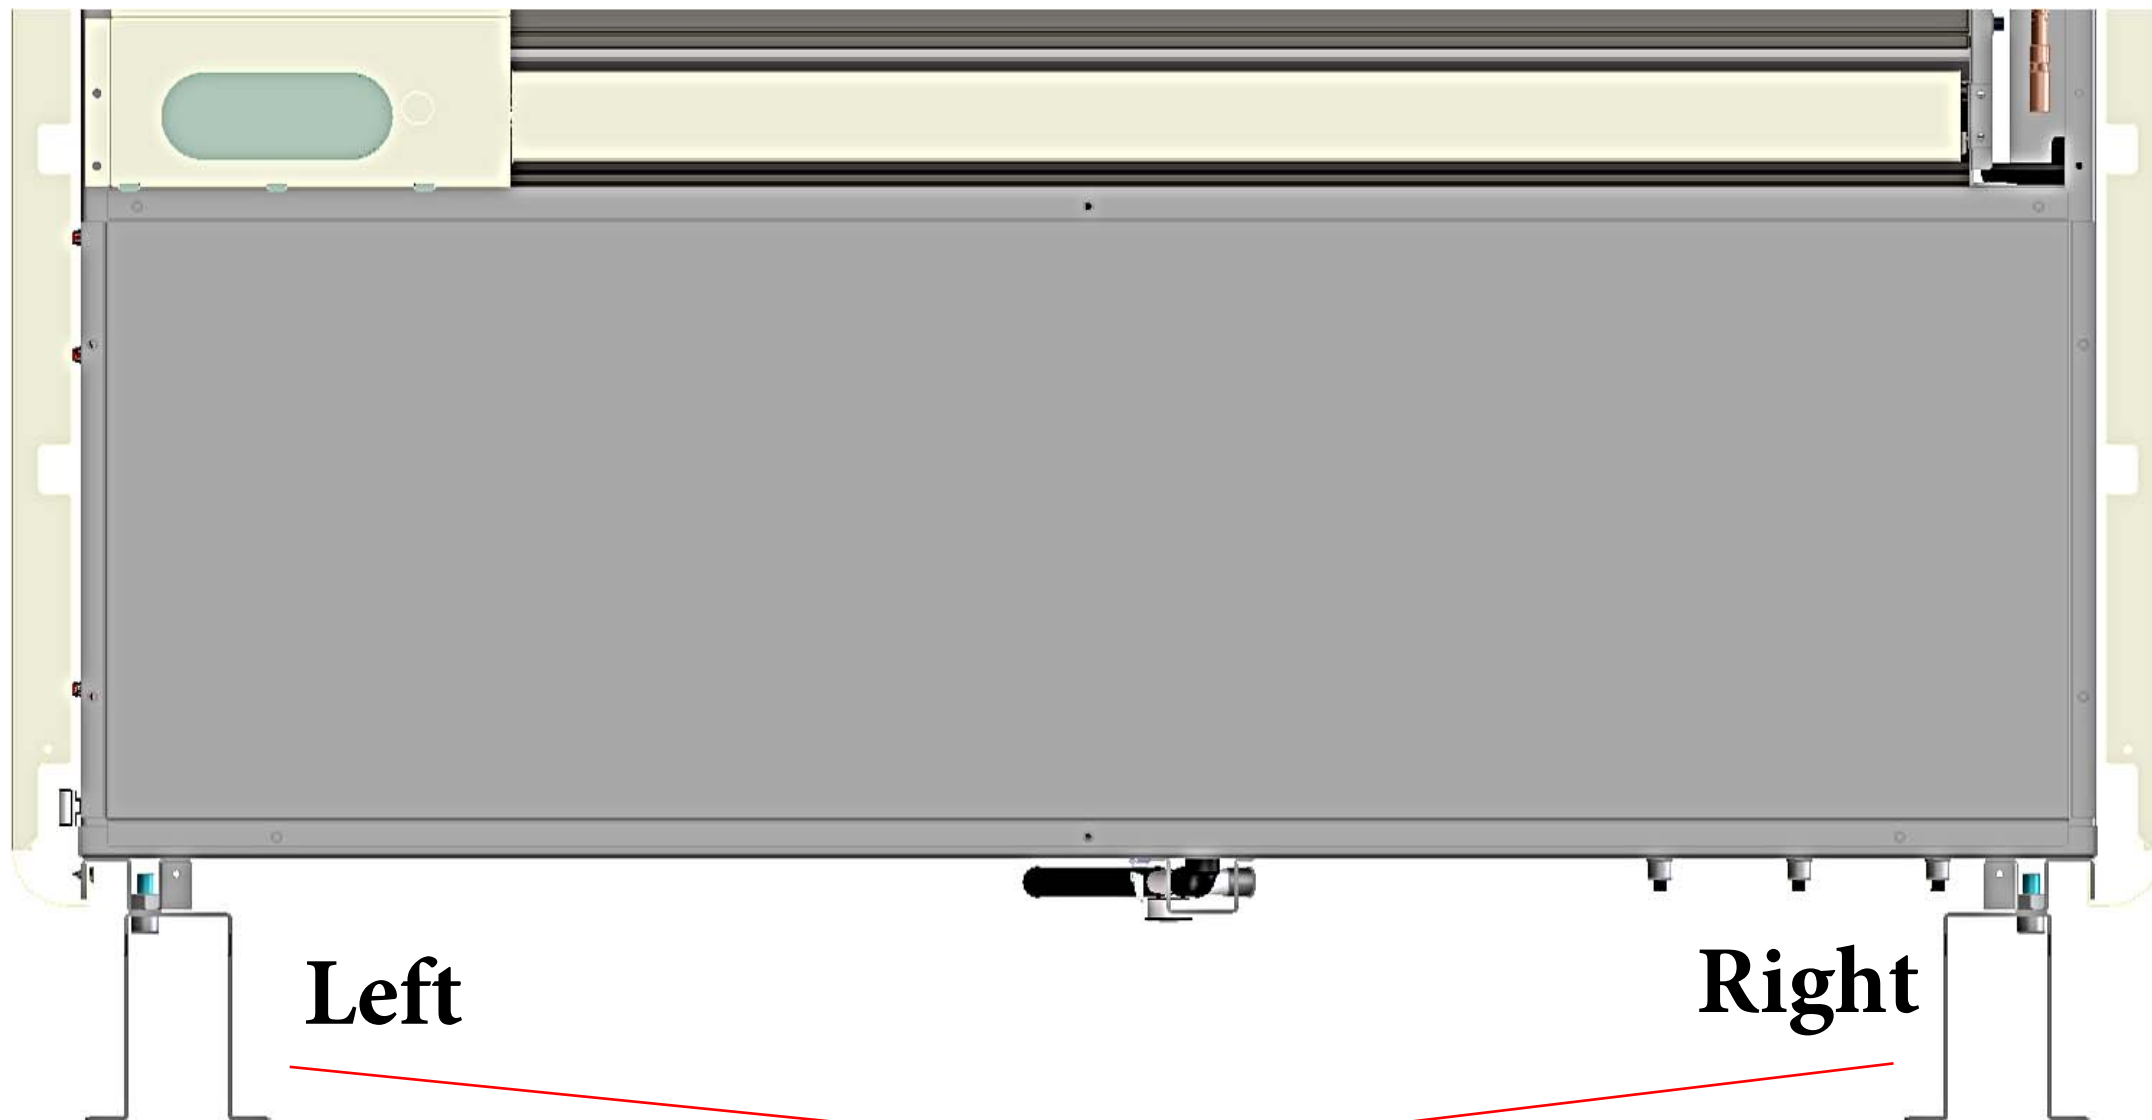


Left

Right

Pay attention to the assembly of the fixing brackets on the floor:
looking at the front of the machine the result should be the same as
the figure


6

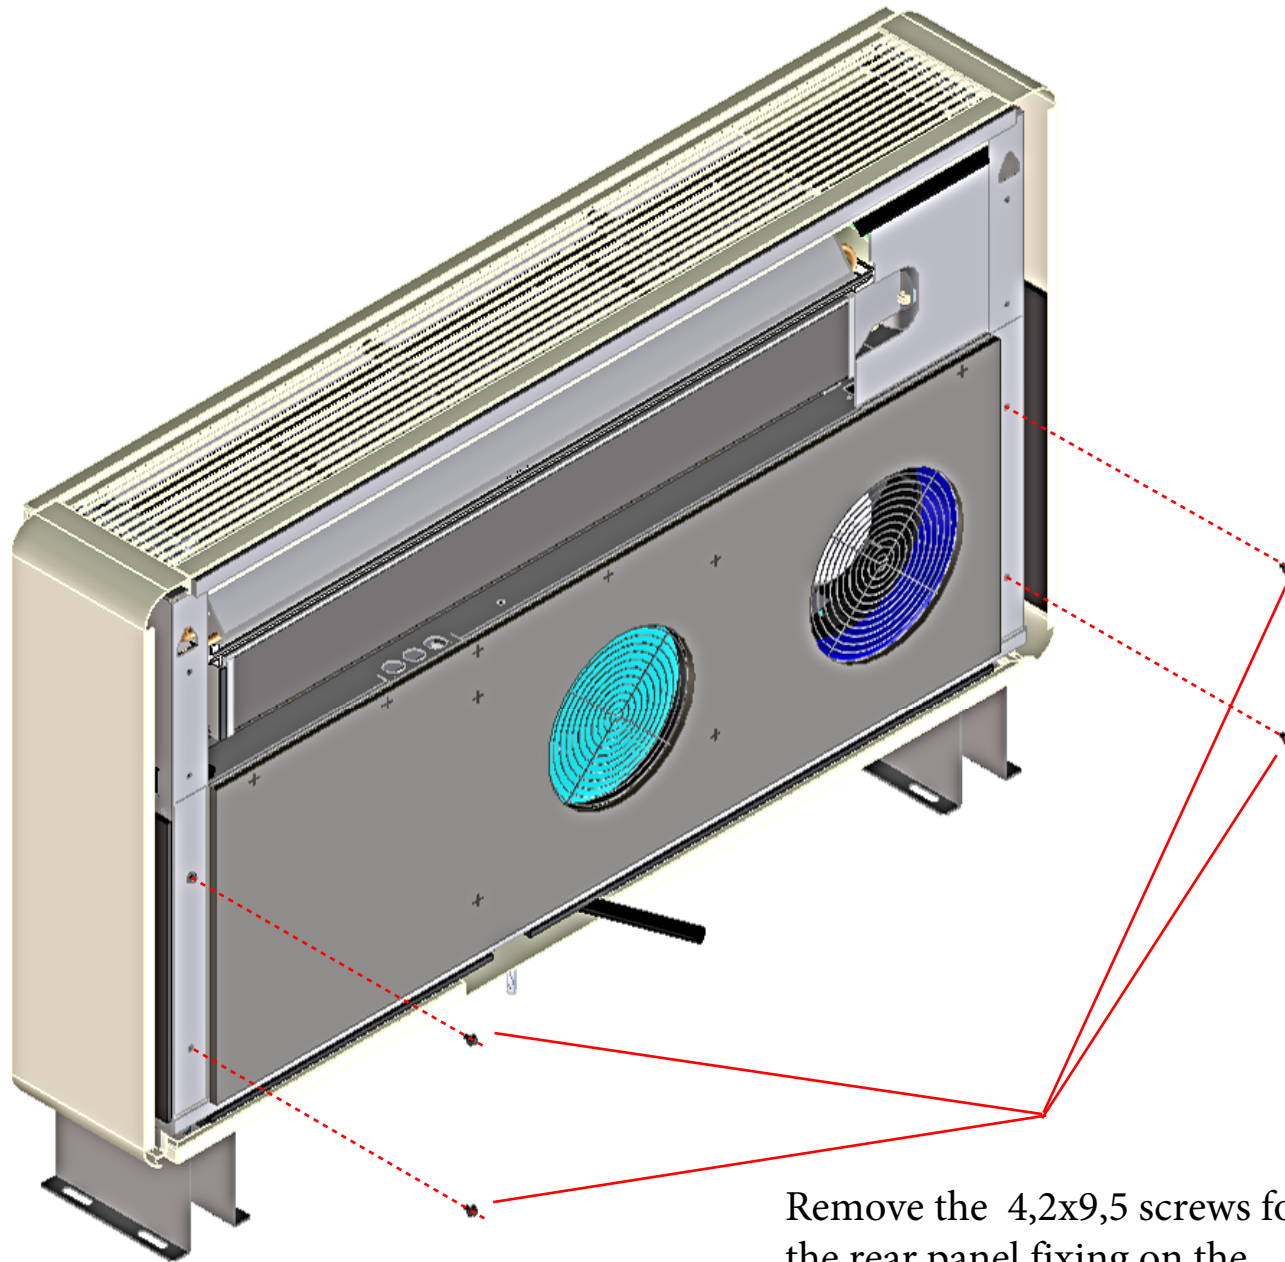


Remove the 4,2x9,5 screws for
the rear panel fixing on the
machine

7

Remove yellow double-sided adhesive tape on the back of the aesthetic rear panel

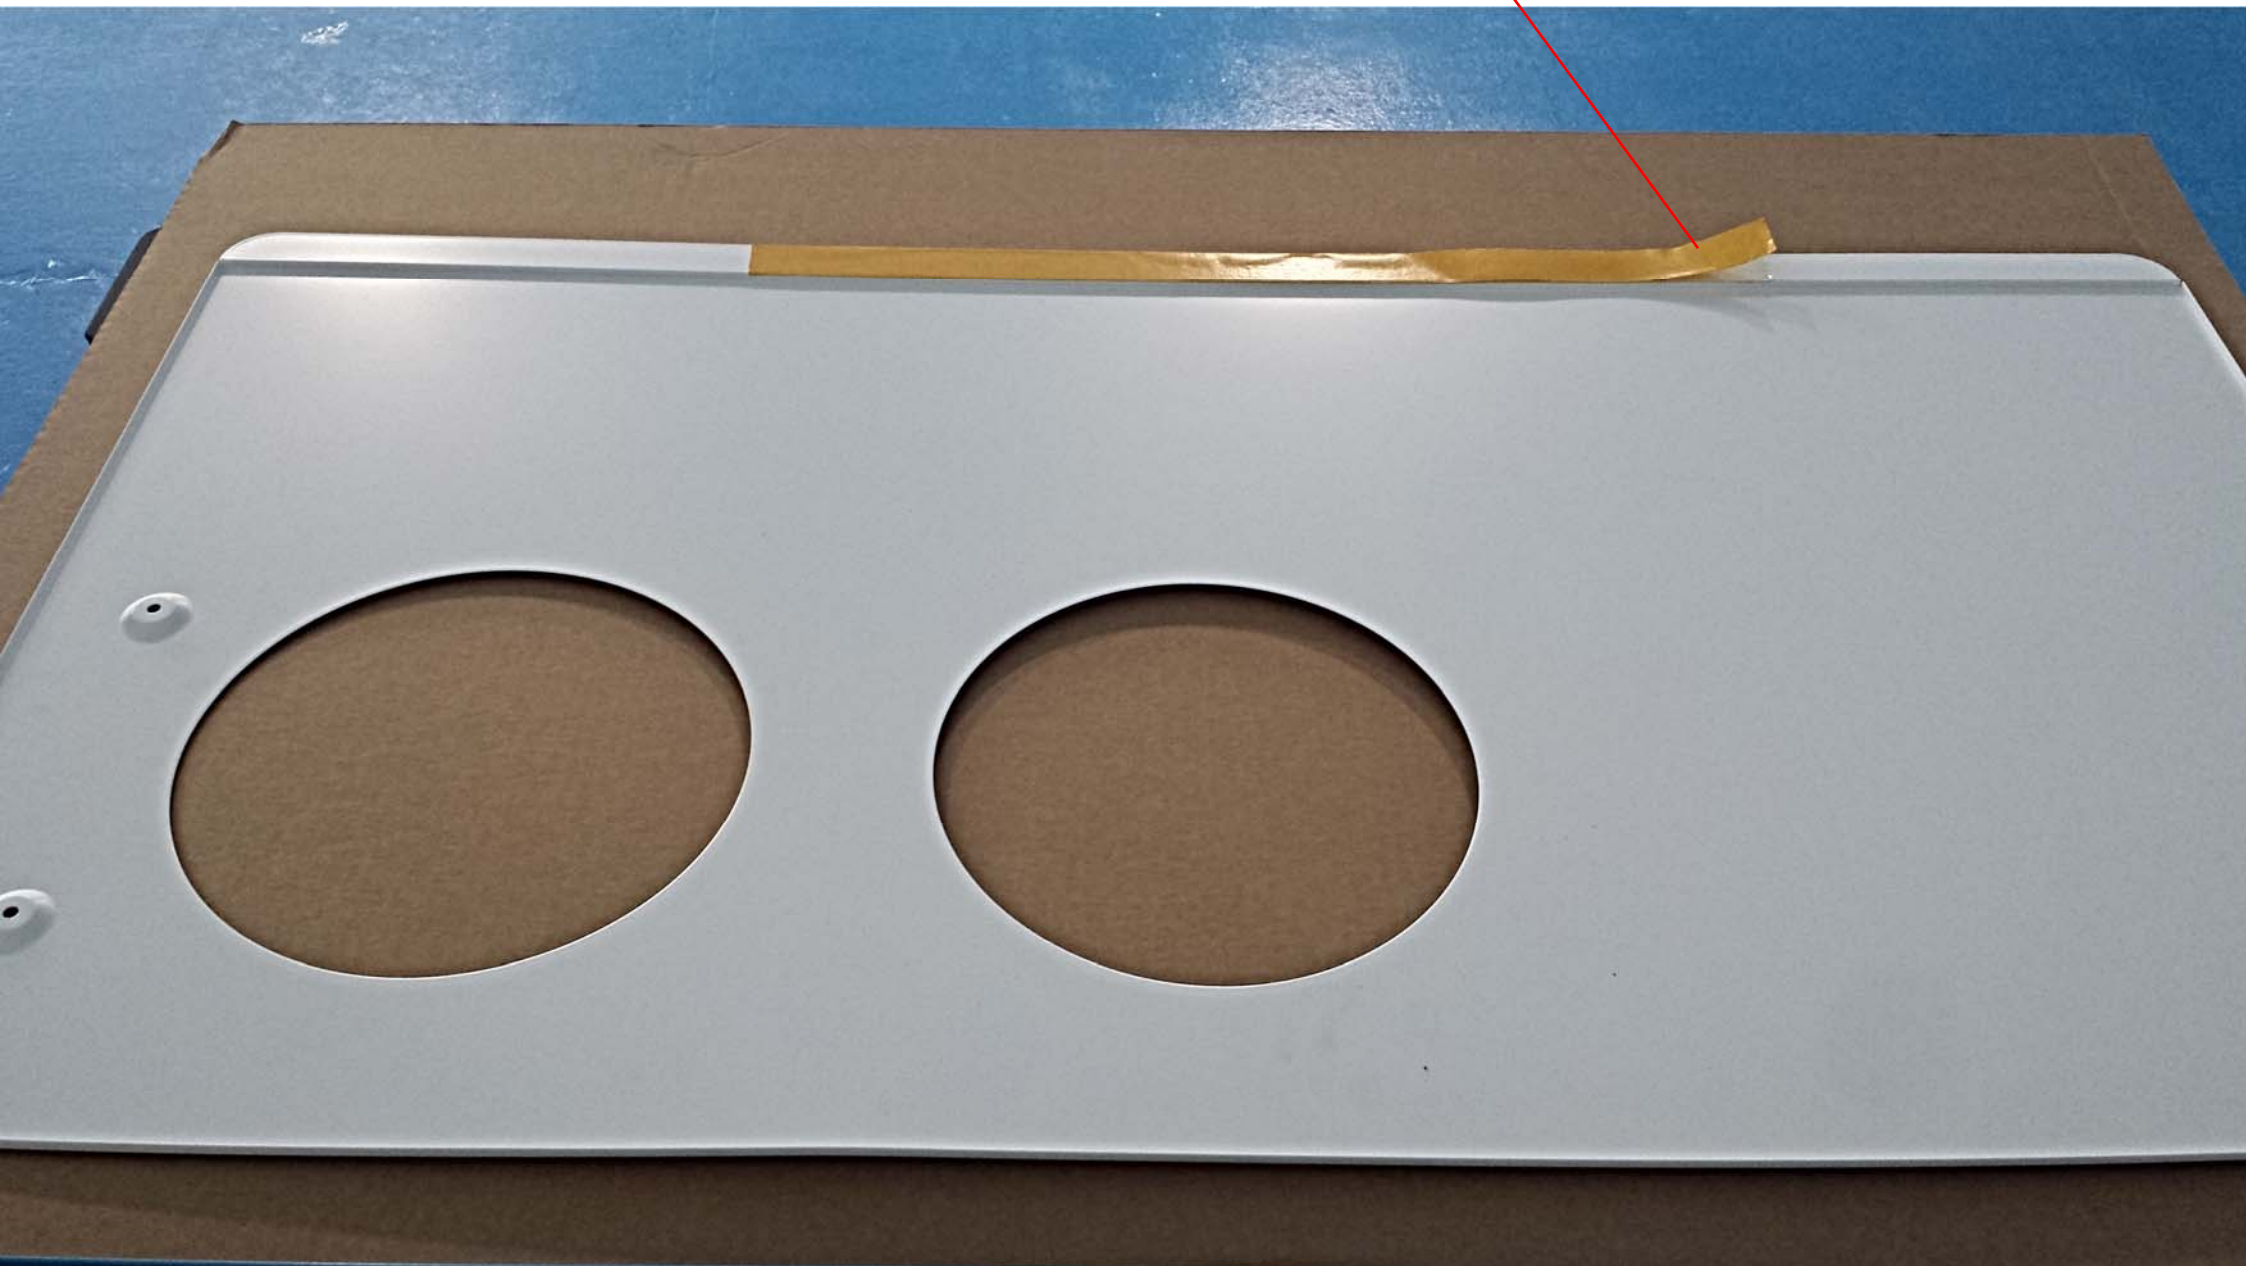

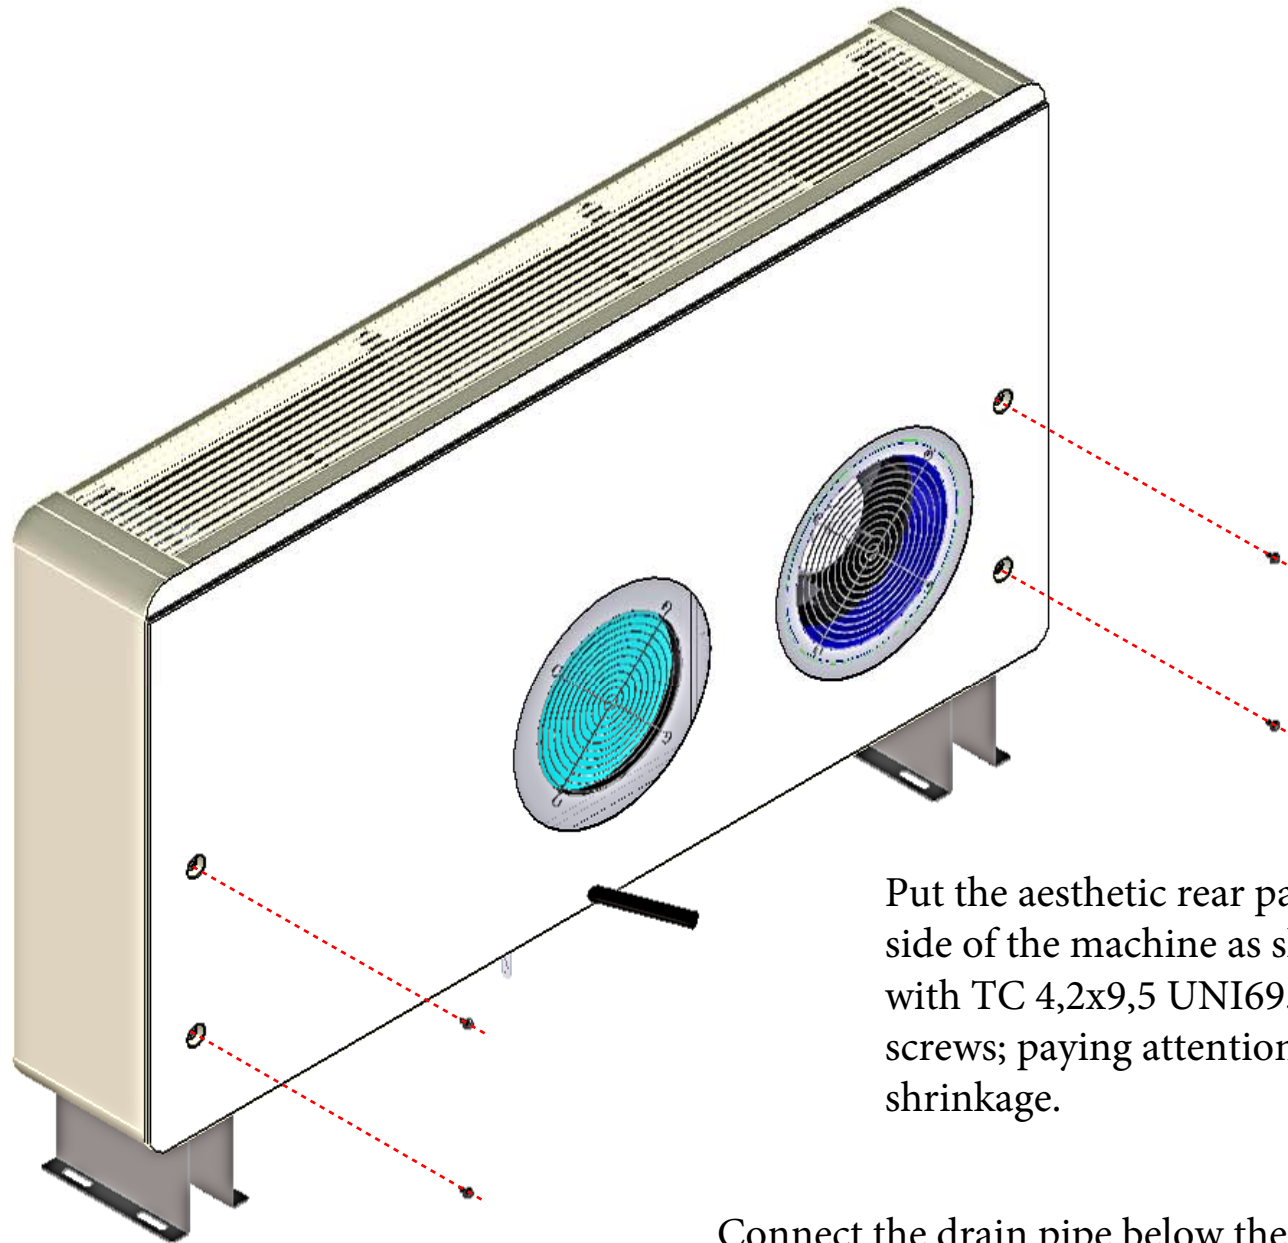


Put the aesthetic rear panel on the back side of the machine as shown and fix it with TC 4,2x9,5 UNI6954 galvanized screws; paying attention to possible metal shrinkage.

Connect the drain pipe below the aesthetic rear panel


9

Fix the machine at the floor with dowels and fishers not included in the kit

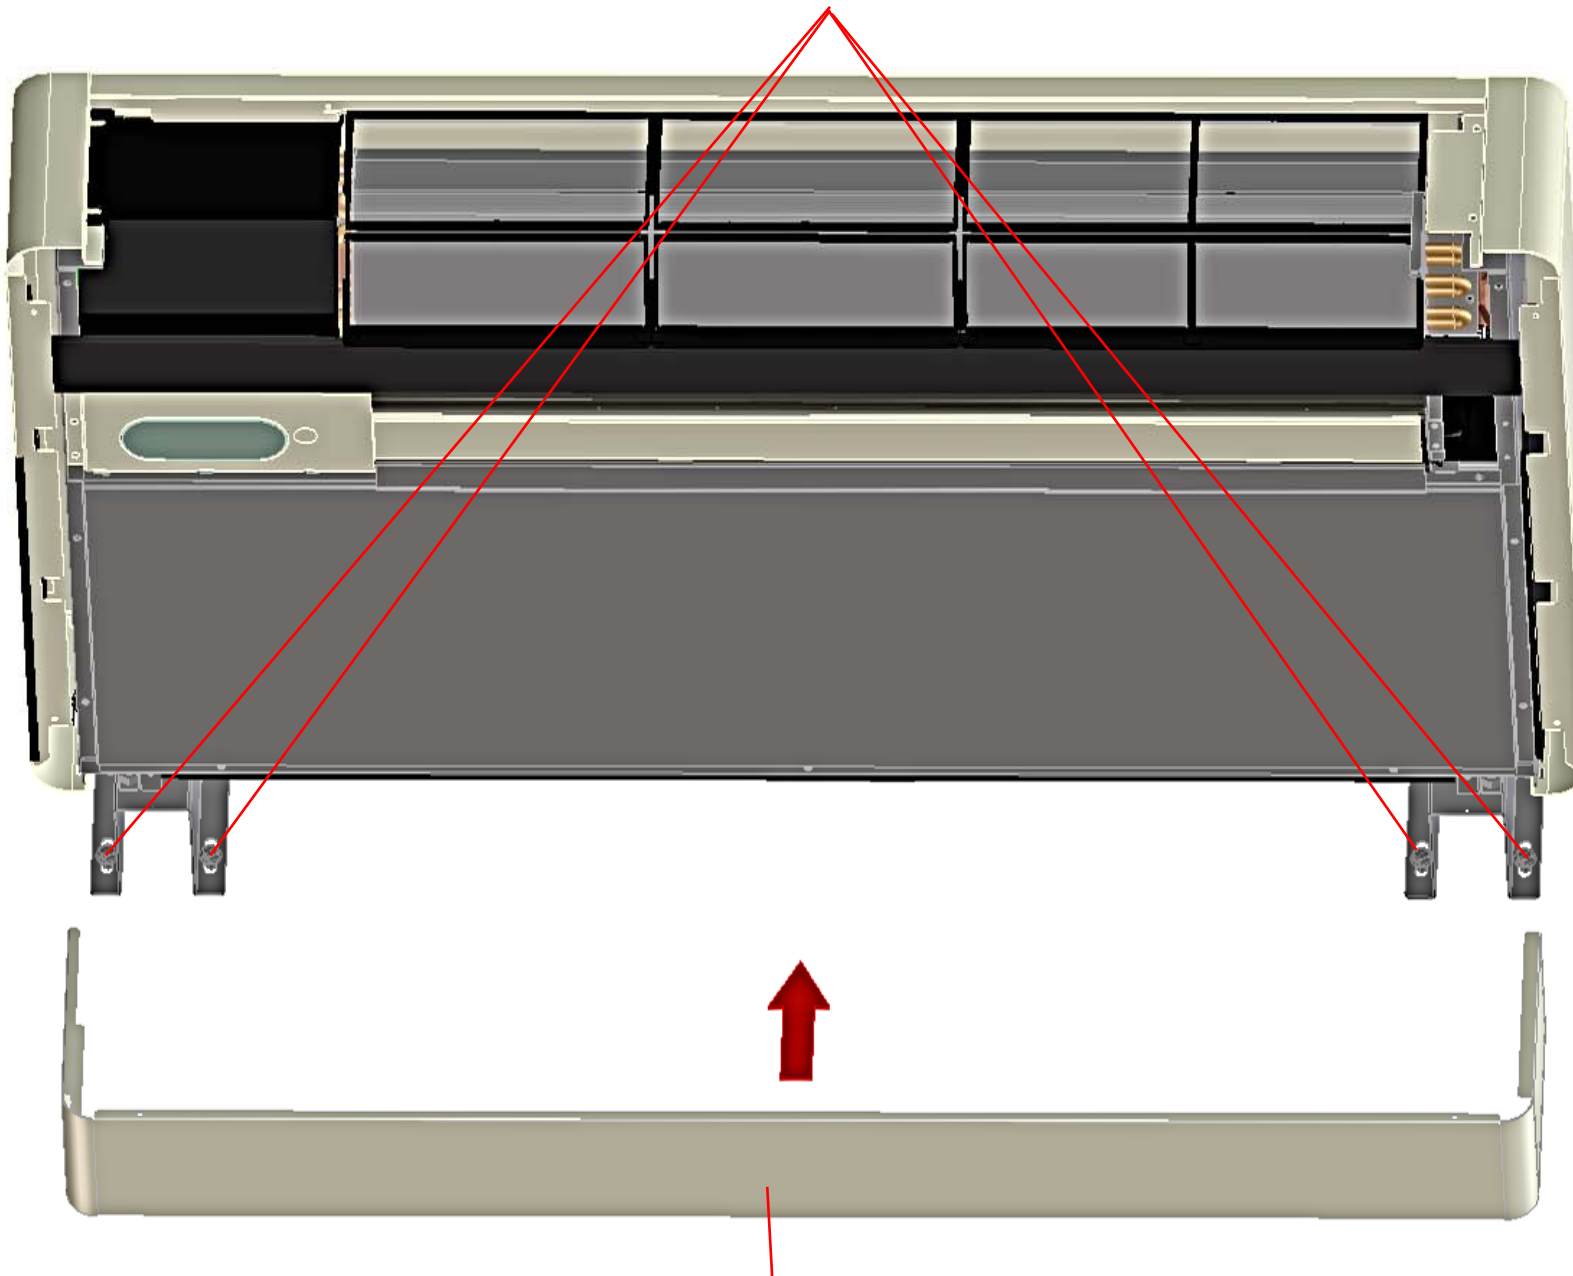

Once the machine is fixed at the floor, put the aesthetic floor bracket aesthetic cover in front of the machine as shown

10

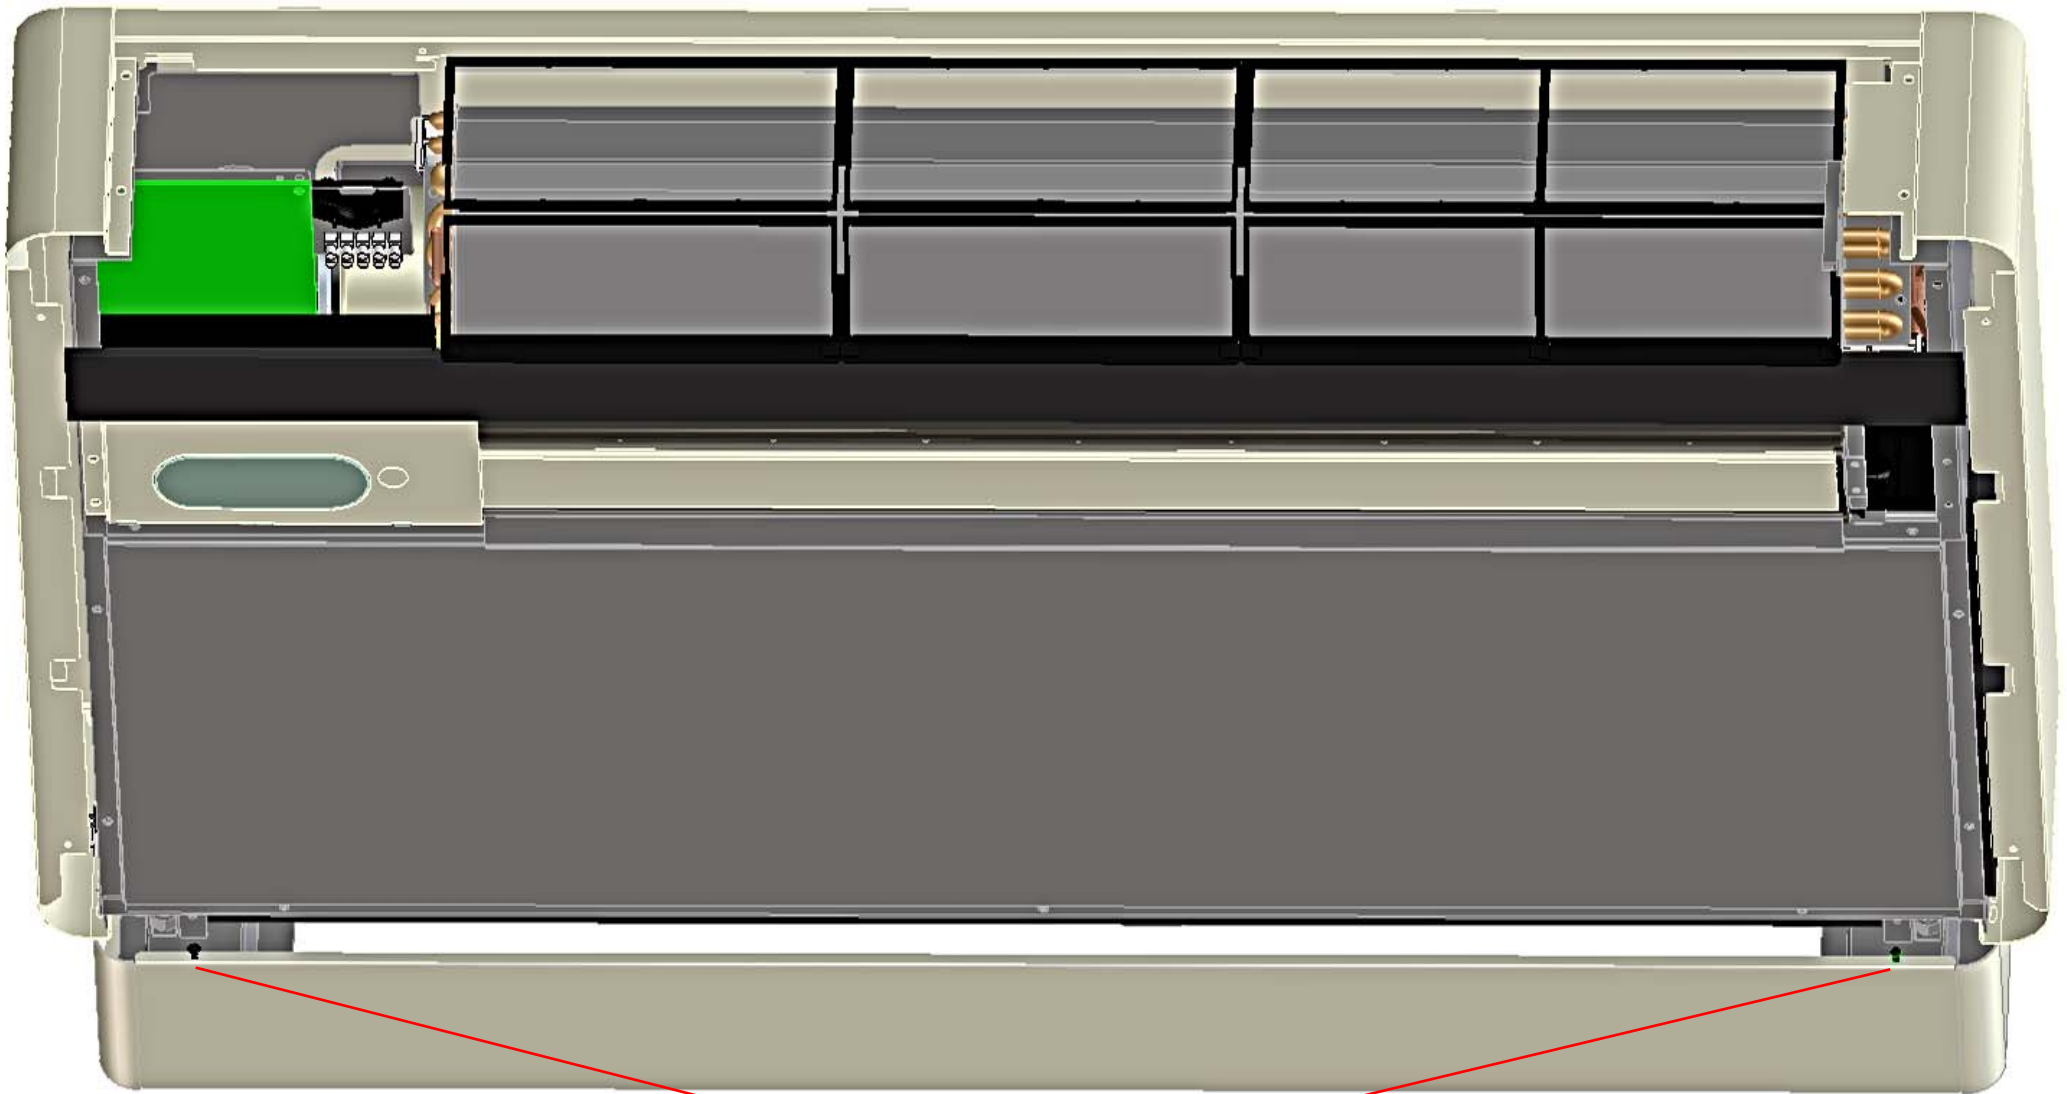


Fix the aesthetic floor bracket with 2 screws 2,9x 9,5 black

11

Screw 2,9x9,5 black

Floor bracket aesthetic cover

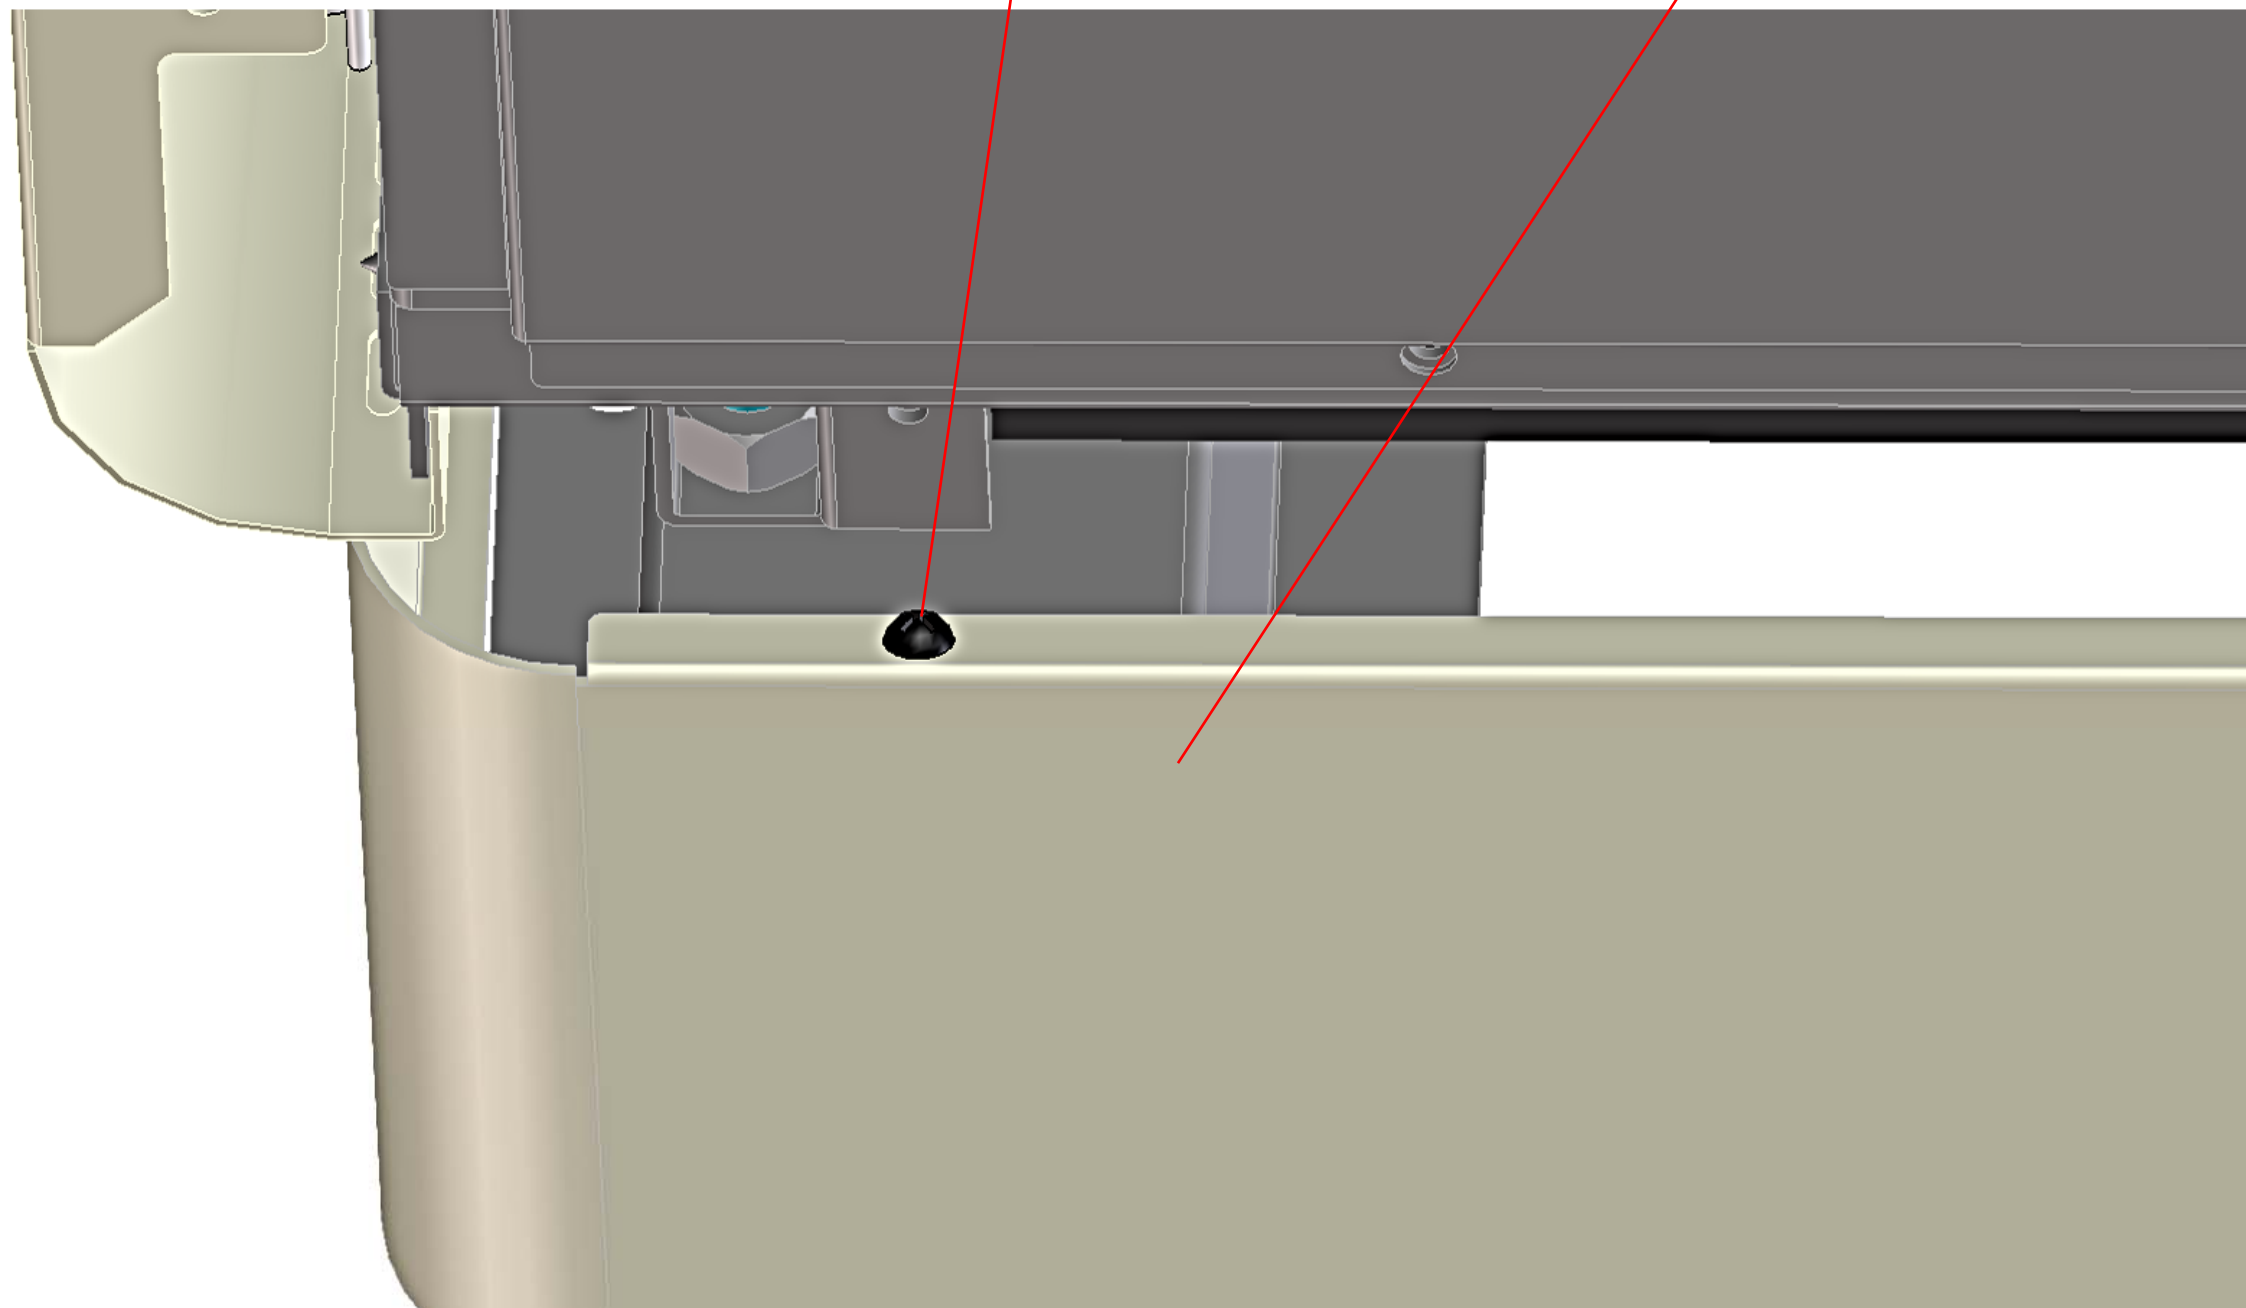

After finishing this operation, reassemble frontal aesthetics panel, aesthetic plastic side covers and upper grid going back to steps 1 and 2